

# Installation & Removal

Safe, easy shoring installation & removal process



Installation 1

Connect hydraulic hose line from pump to shore. Hook release tool through handle and lower shore into trench.




Installation 2

Place shores in accordance with the Tabulated Data and begin pressurizing the shore. Normal operating pressure is 750 to 1500 psi.



Installation 3

When shore is in place and pressurized to a safe working range, disconnect the hose fitting with the release tool.

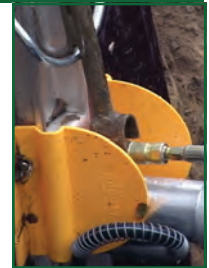

Removal 1

Release shoring fluid at hose fitting with the release tool and allow shore to depressurize. The released fluid is biodegradable.



Removal 2

Pull the shore from the trench with the removal hook and release tool. The shore will scissor back toward a folded position.



Removal 3

Continue pulling the shore away from the trench until it folds flat. Finger guards help protect from pinch points.

